





**Dimensión Tabla - RB & RB1**



RB	Number	For shaft Diameter	Outside Diameter (Ød)		Fitted Width	Clearance	Case Thickness	MAX.
	RB1	Ød	RB	RB1	H	B1	T	Ød 2
RB-10	RB1-10	10	24	26	3,5	1,0	0,5	15
RB-11	RB1-11	11	26	28	3,5	1,0	0,5	17
RB-12	RB1-12	12	26	28	3,5	1,0	0,5	17
RB-14	RB1-14	14	30	32	4,0	1,0	0,5	21
RB-15	RB1-15	15	30	32	4,0	1,0	0,5	21
RB-16	RB1-16	16	32	34	4,0	1,0	0,5	23
RB-17	RB1-17	17	32	34	4,0	1,0	0,5	23
RB-18	RB1-18	18	33	35	4,0	1,0	0,5	24
RB-20	RB1-20	20	35	37	4,0	1,0	0,5	26
RB-22	RB1-22	22	40	42	4,0	1,0	0,5	31
RB-24	RB1-24	24	40	42	4,0	1,0	0,5	31
RB-25	RB1-25	25	40	42	4,0	1,0	0,5	31
RB-26	RB1-26	26	40	42	4,0	1,0	0,5	31
RB-28	RB1-28	28	43	45	4,0	1,0	0,5	34
RB-30	RB1-30	30	47	48	4,5	1,0	0,5	37
RB-32	RB1-32	32	49	50	4,5	1,0	0,5	39
RB-35	RB1-35	35	52	53	4,5	1,0	0,5	42
RB-38	RB1-38	38	55	56	4,5	1,0	0,5	45
RB-40	RB1-40	40	57	58	4,5	1,0	0,5	47
RB-41	RB1-41	41	57	59	4,5	1,0	0,5	48
RB-42	RB1-42	42	59	61	4,5	1,0	0,5	49
RB-45	RB1-45	45	62	63	4,5	1,0	0,5	52
RB-48	RB1-48	48	65	67	4,5	1,0	0,5	55
RB-50	RB1-50	50	70	72	5,5	1,0	0,8	58
RB-52	RB1-52	52	72	74	5,5	1,0	0,8	60
RB-55	RB1-55	55	75	77	5,5	1,0	0,8	63
RB-58	RB1-58	58	78	80	5,5	1,0	0,8	66

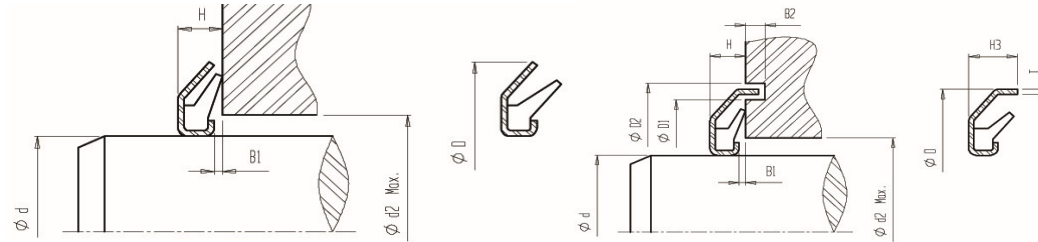

## Dimensión Tabla - RB & RB1

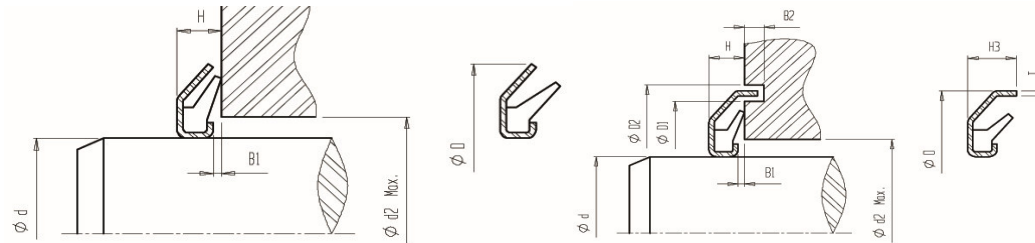

RB	Number	For shaft Diameter	Outside Diameter (Ød)		Fitted Width	Clearance	Case Thickness	MAX.
	RB1	Ød	RB	RB1	H	B1	T	Ød 2
RB-60	RB1-60	60	80	82	5,5	1,0	0,8	68
RB-62	RB1-62	62	82	84	5,5	1,0	0,8	70
RB-65	RB1-65	65	85	87	5,5	1,0	0,8	73
RB-68	RB1-68	68	88	90	5,5	1,0	0,8	76
RB-70	RB1-70	70	90	92	5,5	1,0	0,8	78
RB-72	RB1-72	72	92	93	5,5	1,0	0,8	80
RB-75	RB1-75	75	95	97	5,5	1,0	0,8	83
RB-78	RB1-78	78	98	100	5,5	1,0	0,8	86
RB-80	RB1-80	80	100	102	5,5	1,0	0,8	88
RB-85	RB1-85	85	105	107	5,5	1,0	0,8	93
RB-90	RB1-90	90	110	112	5,5	1,0	0,8	98
RB-95	RB1-95	95	115	117	5,5	1,0	0,8	103
RB-100	RB1-100	100	120	122	5,5	1,0	0,8	108
RB-105	RB1-105	105	125	127	5,5	1,0	0,8	113
RB-135	RB1-135	135	159	161	6,5	1,0	0,8	145
RB-225	RB1-225	225	250	252	7,5	1,0	1,0	235